



OWNER'S MANUAL

Customer Service AUS. | 1800 763 498
Customer Service NZ. | 0800 483 6789

table of contents

Safety Precautions and Usage Statements 1-2

Parts List 3

Base and Remote Overview 4

Quick Reference Guide 5

Installation Guide 6-7

Remote Control 8-10

USB Charging 11

Connecting Strap 12

Syncing Two Bases 13

Headboard Brackets (not included) 14

Emergency Battery Backup Strap 15

Troubleshooting 16

Warranty 17-18

safety precautions and usage statements

Attention: Important Safety Disclaimers

Read all instructions before using your TEMPUR ERGO™.

SAVE THESE INSTRUCTIONS.

WARNING

To reduce the risk of shock, burns, fire or injury:

Always unplug the base from the electrical outlet before servicing any part of the base. To reduce risk of electric shock, unplug the base before cleaning. To safely disconnect, ensure the base is in a flat position with all motors off, and unplug from power source.

Keep the power cord away from heated surfaces. Never operate the base when the air openings are blocked. Keep air openings free of lint, hair and the like. Do not drop or insert any object into any opening.

Discontinue use of the bed base and contact a qualified service center if: it has a damaged cord or plug, is not working properly, or has been dropped into water.

Only use this bed base for its intended use as described in this manual. Do not use accessories/attachments that are not recommended by the manufacturer.

Close supervision is required when the bed base is used by or near children, convalescents or disabled persons.

Outlet Safety:

For optimal safety and operation, plug bed base into a surge protector (not included).

The bed base should only be plugged directly into a wall outlet or surge protector (recommended). Improper connection of the equipment can result in the risk of electrical shock, electrical fire or faulty operation of this bed base. If the plug does not fit your outlet, contact a qualified electrician to install a suitable outlet. Unauthorized modification or failure to use a wall outlet or surge protector could void the electrical portion of your warranty.

Warranty Warning:

Do not open or tamper with control box, motors, or remote (with the exception of battery compartments). The warranty will be void if the internal workings of these components are tampered with. For

complete warranty information refer to the warranty information section on pages 17-18.

In-Home Use and Hospital Disclaimer:

The TEMPUR ERGO™ bed base is designed solely for in-home use. This base was not designed as a hospital bed and is not designed to meet hospital standards.



Do not use this base with TENT TYPE oxygen therapy equipment or near explosive gases.



Children and Pets:

Children and pets can be crushed or killed if they become entrapped in moving parts of the bed. Before you reposition the base, check to be sure children and pets are not near or under the base. Do not teach children to operate the remote. Engage child lockout on the remote before leaving the room. (See p. 10) Store the remote where children can't find it. Children should not operate this product without adult supervision. To avoid injury, children and pets should not be allowed to play on or under the bed.

Immediately dispose of all packaging materials as they may pose a smothering risk to children and pets.

Safety Features:

Manual operation – If something gets caught in the platform when flattened, you can manually raise the platform up by lifting at either the head or foot to relieve pressure and allow for release.

Child-lockout – This remote control is programmed with a child-lock safety feature. Information on activation and deactivation of this feature can be found on the Remote Control page(s) and on the back of your remote control.

Emergency stop – Stop the motion of the platform by pressing any button on the remote control.

Power outage – Use the “Emergency Battery Backup Strap” as

safety precautions and usage statements

a temporary power source to get the base to a desired position. Instructions on how to operate the Battery Backup Strap are on the Emergency Battery Backup page(s).

Power Ratings:

INPUT: AC 100–240V 50/60 HZ 1.5A

OUTPUT: DC 29V 1.8A

WATTS: 52.2W

Product Ratings:

The lift motors are not designed to operate continuously for more than two [2] minutes in an eighteen [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

Weight Limits:

The recommended weight limits on the TEMPUR ERGO™ are: Twin Long / Full / Queen / King / Cal King / Cal King Split : 700 pounds

Maximum weight the bed can support per person is 250 pounds with the weight evenly distributed across the head and foot sections. This product is not designed to support or lift this amount of weight in the head or foot sections alone. NOTE: Exceeding the recommended weight restrictions could damage your TEMPUR ERGO™ and void your warranty. For best performance, you should enter and exit the TEMPUR ERGO™ while it is in the flat or fully lowered position.

TEMPUR ERGO™ fits easily inside bed frames, furniture beds and platform beds that are certified to hold a minimum of 950 pounds. If using this adjustable base without the legs and placing directly on a bed frame or platform bed, cross-bed supports (slats) are strongly recommended to ensure TEMPUR ERGO™ maintains stability during operation.

Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

Acoustics:

In normal base operation the wheels, which allow the bed to maintain its distance from the wall, will make contact with the steel platform supports of the base creating a contact noise. When entering, exiting or shifting weight on the base, this contact noise may be audible as the wheels make contact. This is normal.

Fabric Care:

To prolong the life of your fabric, protect from direct sunlight whenever possible. For spot cleaning, wipe area with a light damp sponge or vacuum with a soft brush attachment to remove particles. Keep at a minimum of 30cm (12 inches) away from direct heat sources. For deeper cleaning, blot liquid spills with a clean dry cloth. Wipe with a clean cloth dampened with warm water. Do not wet excessively. A soft bristle brush may be used to remove ingrained soil. Avoid scratching by gentle brushing. Wipe with a clean cloth dampened with warm water to remove residues after brushing. Dry in shade away from direct heat.

If persistent marks remain visible after cleaning, seek professional advice.

SAVE THESE INSTRUCTIONS.

FCC Compliance:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

parts list


Before discarding the packing materials, ensure all the parts are accounted for.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.

- A) Wireless Remote Control (1)
AAA Batteries (2)
- B) Mattress Retainer Bar (1)*
- C) Legs (6)
- D) Power Cord (1)
- E) Power Supply (1)
- F) Battery Backup Strip **
- G) Connecting Strap ‡*

Miscellaneous Parts (not included):

- H) Surge Protector (1)
- I) 9 Volt alkaline batteries (2)

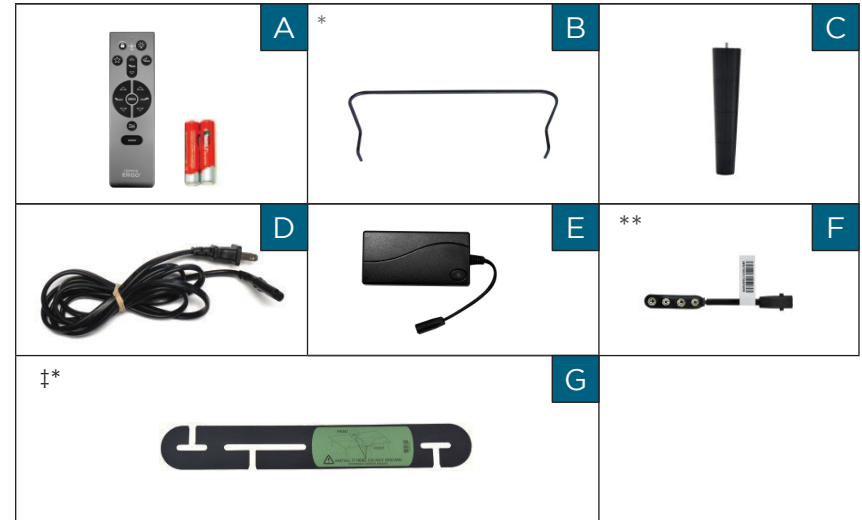



* These items are attached to the base for shipping purposes. Carefully remove from base and set aside.

** Leave connected to the Power Supply.

‡ Only included in Twin Long and Cal King Split

base and remote overview

Actual product design may vary.

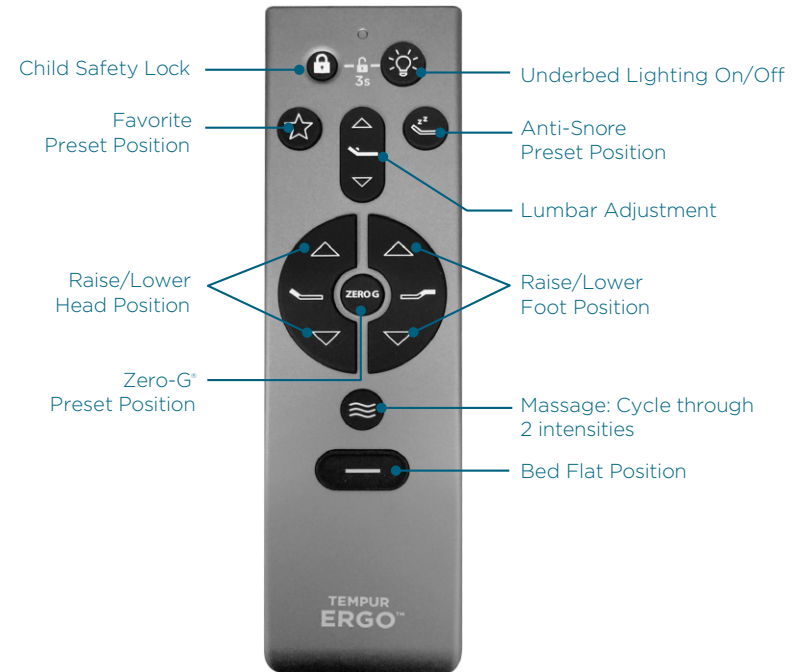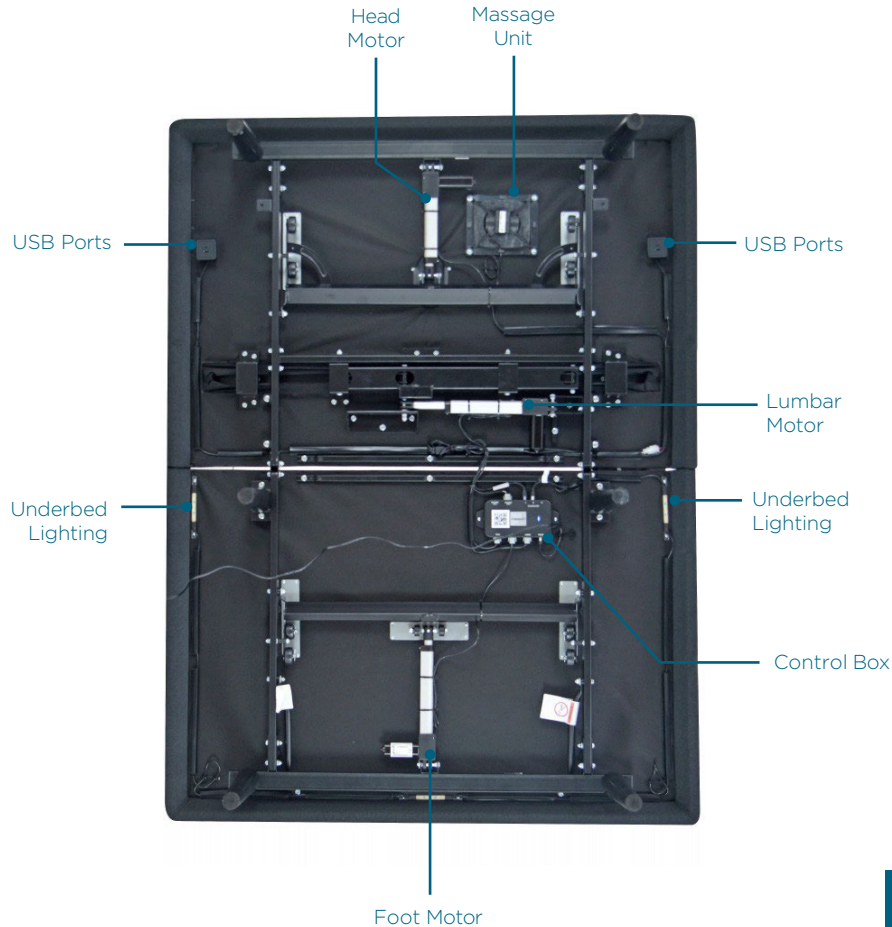


See pages 8-10 for complete Remote Control details including Child Lock function.

quick reference guide

Not to scale. For illustration purposes only. Read all instructions before beginning installation.

ELECTRONICS OVERVIEW

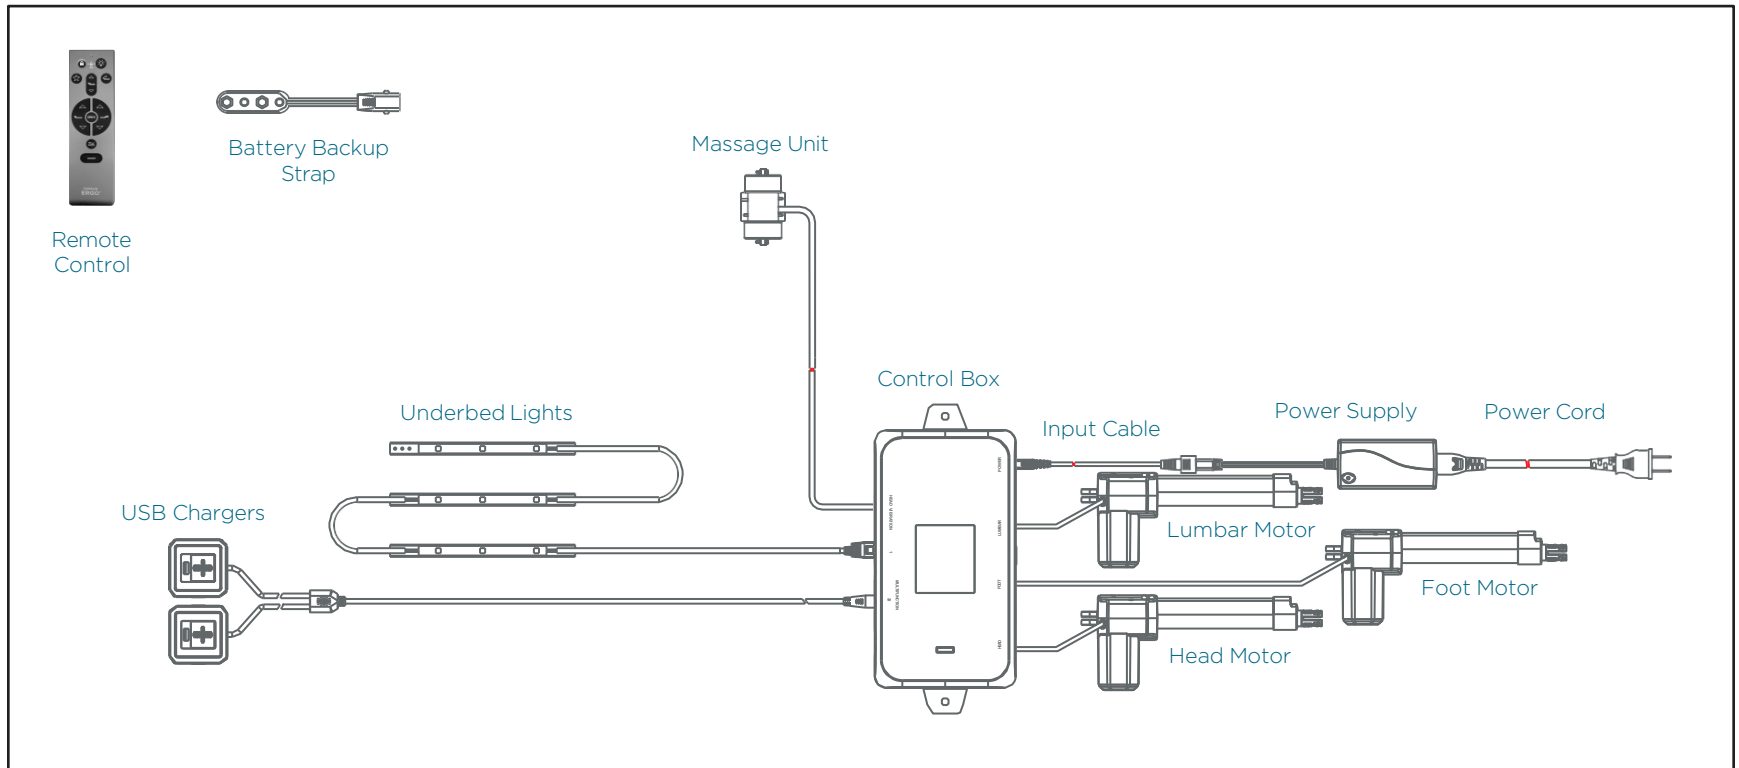

If installing a split unit, see pages 12-13.

installation guide

Always use two people when setting up the base.


STEP 1

Place the bed base box in a desired location with the bottom of the box facing up.

Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.

STEP 2

Remove the bed base from the box. Unfold the bed making sure to keep the bottom of the bed facing upwards.

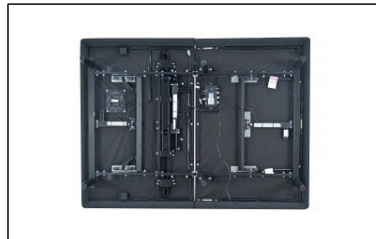


STEP 3

To install Headboard Brackets (sold separately) see instructions on page 14.

Legs are shipped fully assembled. Alternative heights in 3" increments can be achieved by removing leg segments.

To install the legs, thread the leg into frame, and tighten by hand. Do not over tighten.

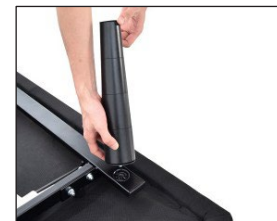

STEP 4

To sync two bases see detailed installation instructions on pages 12-13.

It is recommended to leave the battery backup strap attached to the power supply for use when needed. 2 9V batteries (not included) will be required for its use.



installation guide

STEP 5

Uncoil Input Cable (connected to Control Box's power port) and plug into Power Supply.



STEP 6

Uncoil the Power Cord and connect to the Power Supply. Place Power Supply on the ground and extend from the base. Ensure that the Power Supply and all attached cords are directed toward the desired surge protector.



STEP 7

Carefully flip the base over on to its legs. Important: Two people are required to move the bed base. Do not drag across the floor. Do not rest frame on its side, excessive pressure may damage the legs.

STEP 8

Plug the Power Cord into a power source. A surge protector is recommended.

STEP 9

Ensure that batteries are correctly installed in the remote. Quickly test remote functions to verify proper setup before placing mattress on base. Return the base to a FLAT position before placing the mattress on top.

STEP 10

To install the mattress retainer bar, insert each end of the bar into the holes at the foot of the platform.




Setup is now complete! Test all functions on remote.



remote control

Remote Control arrives paired to the adjustable base.
Two (2) AAA batteries are required to operate the remote.

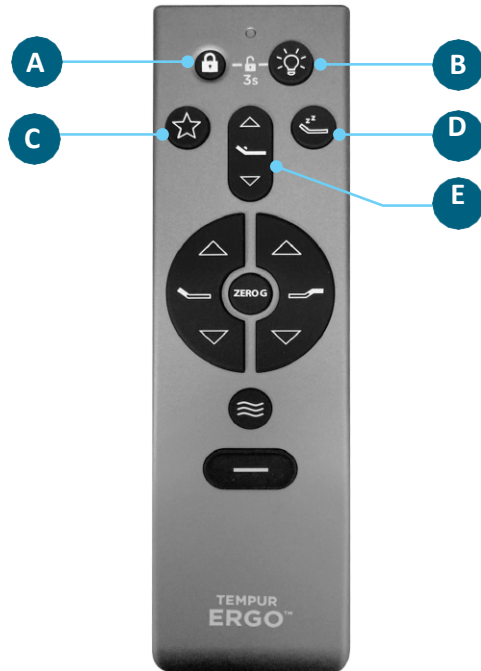

Functions

A. Child Safety Lock Function:

Use to lock/unlock the controls on the remote control.

LOCK: Press/hold Child Lock button (A) for 3 seconds. LED will flash twice.

UNLOCK: Hold Child Lock button (A) and Underbed Lighting button (B) together for 3 seconds. LED will flash once.

B. Underbed Lighting On/Off

Use to turn the underbed lighting on or off.

C. Favorite Position*

Reprogrammable preset position


D. Anti-snore Preset Position*

Raises the head of the bed slightly to help open airways and reduce snoring.

E. Lumbar Adjustment

Increase or decrease the lumbar support.

remote control

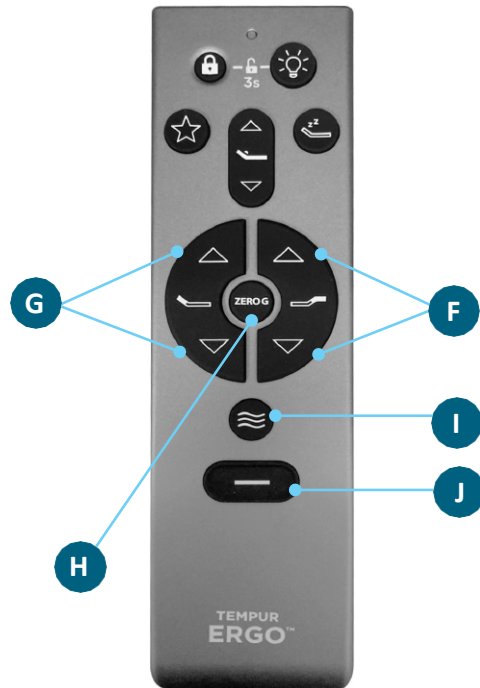

Functions

F. Foot Position Adjustments

Raise and lower the foot section of the adjustable base.

G. Head Position Adjustments

Use to raise and lower the head section of the adjustable base.

H. Zero-G® Preset Position*

Use to adjust your legs to relieve pressure off the lower back. For optimal performance, please return the bed to the flat position prior to selecting the Zero Gravity preset position.

I. Massage Mode

Cycle through 3 massage intensities (Low > High > Off)

J. Bed Flat Position

Use to return the adjustable base to a flat position.

* TO PROGRAM THE PRESET POSITIONS:

Articulate the head, lumbar and foot to your desired position. Next, press and hold one of the programmable preset positions [Favorite, Anti-snore, or Zero-G®] for 5 seconds. The position is now saved. When using the saved favorite preset, head and foot sections will move simultaneously and lumbar will adjust after head and foot sections stop.

NOTE: To restore the preset buttons back to their original factory settings, hold FLAT and ZERO-G® simultaneously for at least 5 seconds. The original preset will be restored.


remote control

Remote Pairing

The original remote that comes in the box is already paired to the adjustable base. No further action is required. In the event that the remote is not paired with the base, follow the steps below.

STEP 1

Remove rear cover of the remote control by sliding it down to expose the PAIR button. Unplug the Power Cord from your power outlet. Wait 1 minute, then plug it back in to your power outlet. Perform Step 2 within 10 seconds, while the control box light is flashing.

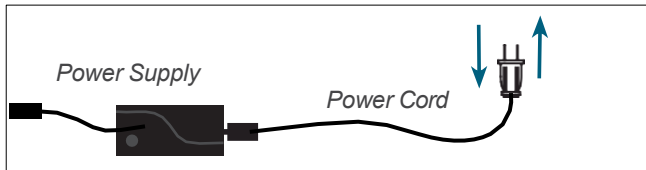

STEP 2

Press and hold the PAIR button on the back of the remote. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the LED light on the control box will stop flashing. Release the PAIR button.



STEP 3

Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again or call customer service: For customer support, call Customer Service: 1300 306 062, NZ: 0800 483 6789

Child Lock Feature

⚠ WARNING



Children and pets can be crushed or killed in moving parts of the bed! For safety purposes, the child lock function locks the remote control to prevent any accidental button presses and bed movements. Engage child lock on the remote control before leaving the room.

Activate Child Lock



Press/hold dedicated Child Lock button for three (3) seconds.

The remote LED will flash twice to confirm activation. When any button is pressed on the remote while in child lock mode, the LED illuminates for 2 seconds or while button is pressed.

**Child Lock feature will be deactivated when batteries are removed.*

Deactivate Child Lock



Press/hold dedicated Child Lock button and the Underbed Lighting button together for three (3) seconds.

The remote LED will flash once to indicate the remote is no longer in Child Lock. The remote and adjustable base will work normally.

USB Charging

The USB charger is configured with 2 connectors, Type-A and Type-C connector.

TYPE-A CONNECTOR (STANDARD USB)



The **Type-A** USB connector is a standard USB port, used for standard cable connection interface for personal computers and consumer electronics devices.

TYPE-C CONNECTOR




The **Type-C** USB connector is a smaller USB port.

connecting strap (optional)

If any split setup is being installed, plastic Connecting Straps are provided (one per base) to secure the bases together.

STEP 1

With the bases in their desired location, slightly loosen both legs to allow the strap to fit on the leg bolt, between the leg washer and frame.

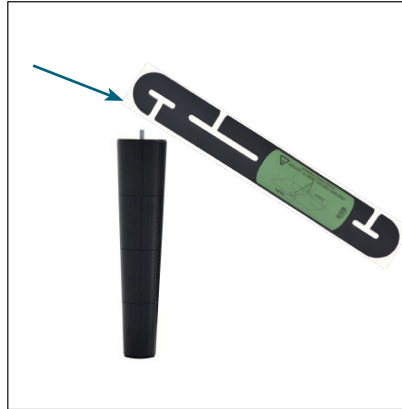

STEP 2

Slide side (a) of the Connecting Strap onto leg bolt. Swing the strap and connect side (b) to the leg bolt. Secure the strap by shifting to the left.



STEP 3

Re-tighten legs. Do not over tighten. Use the remaining strap and repeat on other end of the base.

syncing two bases (optional)

To sync two bases wirelessly, please refer to the below instructions.

STEP 1

Unplug bases from power outlet. Wait 1 minute, then plug it back into your power outlet.

STEP 2

Press and hold the SYNC button on the back of both remotes simultaneously. The SYNC buttons will illuminate and start to flash. When the SYNC buttons stop flashing, release the SYNC buttons. Bases are now synced.



PERFORMANCE NOTES

- If bases become mismatched, pressing the FLAT button will re-sync the mechanical positions.

To un-sync two bases:

1. Press and hold the Remote A Sync button until the button light blinks and then release the button.
2. At this time, Remote A will return to the single communication with Base A. The bases are no longer synced.
3. When users operate Remote B, Remote B will wake up from hibernation and find that Base A has resumed the single communication, and thus Remote B will return to single communication with Base B.

STEP 3

Test all remote functions. If the remote buttons do not impact both adjustable base movements, please repeat the process again or call customer service: For customer support, call Customer Service: 1800 763 498, NZ: 0800 483 6789

headboard bracket installation guide (optional)

Headboard Brackets are an optional accessory and are not included.

A hex key is included with the accessory kit to complete installation.

STEP 1

- a. Align the hole in the bracket to the brass sleeve into which the leg threads. Hold the bracket in place and screw the leg into the base until it is snug. **DO NOT OVERTIGHTEN.** Too much force may cause the leg to spin freely.



- b. Align the tab with the hole in the frame (located towards the foot of the base) and use a short bolt, washer and wingnut to secure the bracket. Make sure the bolt is tight.




STEP 2

- a. Measure the distance between the mounting holes on the headboard and install the T-Bracket to accommodate the headboard.
- b. To install the T-Bracket, slide the T-Bracket through the end of the headboard bracket. Align the flat side of the T-Bracket plate to the mounting holes on the headboard.
- c. Secure T-Bracket in place by inserting two short screws through top of bracket. Use hex key to tighten screws.



STEP 3

Connect your headboard to the attachment plate using the remaining long screws or hardware that came with your headboard. The heads of the bolts will face outward. Use hex key to tighten bolts.

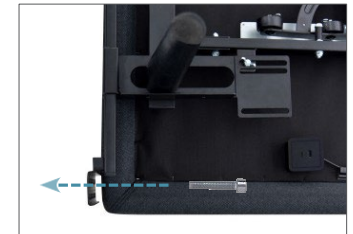


emergency battery backup

Two (2) 9 Volt batteries are required to operate the power down feature and are NOT included.


STEP 1

Disconnect the Power Supply from the input power cord.

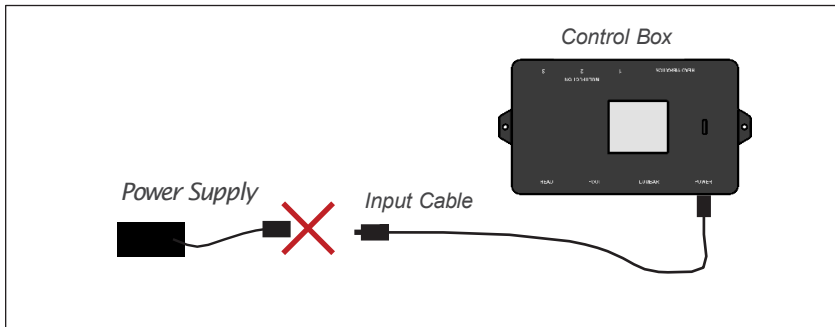

STEP 3

Connect the end of the Battery Backup Strap to the input cable that is attached to the control box.

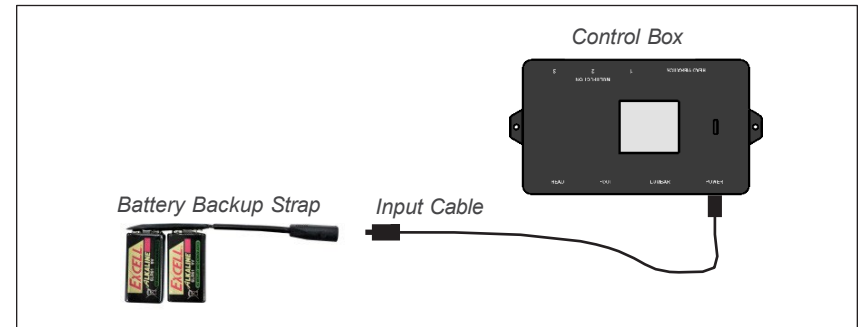

Note: Detach the Battery Backup Strap after the emergency is over, as the system will continue to draw power from the batteries even if not in use.

STEP 2

Connect the Battery Backup Strap to the (2) Alkaline 9 Volt batteries. Do not mix brand name Batteries.



STEP 4

Use the remote control to lower the base. If the base and motors are fully or mostly raised, it is recommended to lower the head, foot and lumbar sections separately rather than use the flat button

troubleshooting

If one or more functions on the bed base have stopped operating:

ADJUSTABLE BASE

- Check under the bed base to verify that the wired connections are secure and that there are no cords or bedding obstructing the movement of the base.
- Check to ensure the blue LED light is illuminated on the control box. If there is no light, verify that the input and power cords are properly connected.
- Unplug the base for 1 minute to reset the electronic components.
- Plug bed base into a different electrical outlet, or test current outlet with another working appliance (a grounded, electrical surge protector is recommended).

REMOTE CONTROL

- Ensure that your remote batteries are properly installed or do not need replacing.
- Ensure Child Lock feature is not enabled. See page 10 for more information.
- Ensure that the remote control is paired to the bed base. See page 10 for more information.

If issue is not resolved by following the instructions above, locate serial number on warranty card or back of remote and For customer support, call Customer Service: 1800 763 498, NZ: 0800 483 6789

warranty information

TEMPUR ERGO™ Adjustable Base:

TEMPUR PEDIC NORTH AMERICA, LLC ("TEMPUR PEDIC") WARRANTS THAT IT WILL, AT TEMPUR PEDIC'S OPTION, REPLACE OR REPAIR PURCHASER'S TEMPUR ERGO™ MODEL IF IT IS DEFECTIVE DUE TO FAULTY WORKSMANSHIP OR MATERIALS, SUBJECT TO THE LIMITATIONS DESCRIBED IN THIS WARRANTY.

TEMPUR PEDIC® UNDERTAKES NO RESPONSIBILITY FOR THE QUALITY OF THE GOODS EXCEPT AS OTHERWISE PROVIDED IN THIS WARRANTY. THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE DESCRIPTION ON THE FACE THEREOF.

THIS WARRANTY APPLIES ONLY TO TEMPUR ERGO™ MODEL. THIS MODEL MAY BE IDENTIFIED BY REFERENCE TO THE SERIAL NUMBER ON THE PRODUCT.

YEARS 1 THROUGH 3: FULL COVERAGE OF PARTS AND LABOR

TEMPUR ERGO™ is warranted against defects in the workmanship or materials for a period of three (3) years from the warranty commencement date. During these first three years of the warranty, the entire product is so covered, including factory supplied electronics, electrical components, drive motors and power supply components. Upon notice during the first through third year from the warranty commencement date, Tempur Pedic® will send replacement parts to the purchaser, at no cost, in order to replace any such defective part. In addition, Tempur Pedic® will pay all authorized labor and transportation costs associated with the repair or replacement of any parts which Tempur Pedic® determines to be defective. This three (3) year warranty shall not apply if the purchaser does not return any and all defective parts to Tempur Pedic® within 15 days of purchaser's receipt of such replacement parts furnished. Return of the frame, however, should it need to be replaced, is not required.

In no instance will this warranty cover any damage attributable to misuse or to normal wear and tear or to excessive weight placed upon the product. Nor will this warranty cover any purchaser other than the original purchaser nor will it cover product purchased from an unauthorized third party. If you are not the original purchaser of this product, you take "as is" and "with all faults." If you did not purchase this TEMPUR ERGO™ we will require proof of purchase from you demonstrating that you are the original purchaser and are eligible to make a valid claim under this Warranty.

YEARS 4 THROUGH 5: FULL COVERAGE OF PARTS ONLY

Upon notice during the years four (4) and five (5) from the warranty commencement date, Tempur Pedic® will offer replacement parts for any defective parts to the purchaser. Factory supplied electronics, electrical components, drive motors and power supply components are included. This two (2) year Warranty shall not apply if purchaser does not return any and all defective parts to Tempur Pedic® within 15 days of purchaser's receipt of replacement part. Purchaser shall bear all service, transportation, labor and shipping costs related to the delivery and/or replacement of the defective part.

FRAME ONLY - YEARS 1 THROUGH 10 WARRANTY

Notwithstanding the above, Tempur Pedic® extends a 10 Year Warranty on the frame itself used in this product. Specifically, Tempur Pedic® warrants that for a full 10 years, any defect in the workmanship or the materials used in the frame itself shall be covered. In the event of a frame defect, full product replacement will be offered. For purposes of this 10 Year Warranty, the frame consists of the metal structure of the base and specifically excludes its cover, its side rails, decking and legs, actuator lift motors, control box, remote controls, power supply, and any power supply cords.

ADDITIONAL TERMS AND CONDITIONS

In no instance will this warranty cover any damage attributable to misuse or to normal wear and tear or to excessive weight placed upon the product. Nor will this warranty cover any purchaser other than the original purchaser nor will it cover product purchased from an unauthorized third party. If you are not the original purchaser of this product, you take "as is" and "with all faults." If you did not purchase this TEMPUR ERGO™ directly from Tempur Pedic® we will require proof of purchase from you demonstrating that you are the original purchaser and eligible to make a valid claim under this Warranty.

This Warranty does not include coverage for damage caused by the purchasers or by other users if the product has been used in a manner inconsistent with the operation and maintenance procedures outlined in the Complete Reference Guide, this Warranty, or any other applicable document published or approved by Tempur Pedic®. Nor does it include coverage if the product has been repaired or modified by the purchaser or by an unauthorized third party or if the product has been damaged in transit. This Warranty does not apply to damage to mattresses, fabric, cables, electrical cords or items supplied by Resellers, as defined below. Contact the Reseller or other appropriate party for warranty information on these items. Nor does this Warranty apply to any unnecessary service calls, including costs for in home service calls solely for the purpose of educating the consumer about the unit or finding an unsatisfactory power connection. In addition, if the recommended weight restrictions are not followed (Twin Long, Double, Queen, King, CA King and Split/Dual CA King bases - up to 700 lbs. each) this Warranty is void.

warranty information

Replacement parts may be new or reconditioned at Tempur Pedic's discretion.

Except for the 10 Year Warranty provided for the frame of this product, there is no warranty at all after five years, dating from commencement of this Limited Warranty.

ADDITIONAL LIMITATIONS ON WARRANTY COVERAGE

In the event a warranty claim is filed and a warranty replacement is deemed necessary, purchaser will be required to surrender the original product, including any components, to Tempur Pedic® at the time of the replacement. Return of the frame, however, should it need to be replaced, is not required.

Repairs to or replacement of the TEMPUR ERGO™ model or its components under the terms of this Limited Warranty will apply to the original warranty period and will not serve to extend such period. This Warranty begins on the "warranty commencement date" which is the date of purchase for new unused products.

If you did not purchase this TEMPUR ERGO™ model directly from Tempur Pedic®, proof of purchase will be required to demonstrate that you are the original purchaser and eligible to make a valid claim under this Warranty.

If original proof of purchase is not provided by the purchaser, Tempur Pedic® reserves the right to determine if the unit is covered, or is not covered, by this Warranty and may use the manufacturing date as the warranty commencement date.

The decision to repair or to replace defective parts under this Limited Warranty shall be made by Tempur Pedic® at its option and at its sole discretion. Except for the Warranty provided for the frame of this product, there is no warranty at all after five years, dating from commencement of this Limited Warranty.

TEMPUR PEDIC® SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY SHALL BE REPLACEMENT OR CREDIT TOWARDS REPLACEMENT AS SET FORTH HEREIN. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THE WARRANTY DESCRIBED ON THE FACE OF THIS LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to every purchaser. This Warranty gives the purchaser specific legal rights, and the purchaser may also have other legal rights, which may vary from state to state.

If you the purchaser experience any problem with your TEMPUR ERGO™ during the warranty period, please consult the troubleshooting section of your Reference Guide. "If the problem persists, please contact Tempur Pedic's Customer Service Department by calling toll-free 1-800-499-1965 or in Canada 1-800-268-4414.

PLEASE RETAIN THIS WARRANTY PAPERWORK AND ORIGINAL SALES RECEIPT FOR EASY FUTURE REFERENCE AND DOCUMENTATION.

This Warranty is valid in all 50 states, Puerto Rico, Mexico and Canada.

**IF YOU HAVE ANY ISSUES WITH YOUR
ADJUSTABLE BASE WITHIN THE WARRANTY
PERIOD, PLEASE REFER BACK TO THE
INSTRUCTIONS IN THIS USER MANUAL.
IF YOUR ISSUES PERSIST, PLEASE CALL
CUSTOMER SERVICE:**

Please have your receipt ready and available.

**CUSTOMER SERVICE TOLL FREE NUMBER:
AUS: 1800 763 498**

NZ: 0800 483 6789

**THANK YOU AND ENJOY YOUR TEMPUR ERGO™
ADJUSTABLE BASE.**

Serial Number: _____

(Place your serial number here for ready reference.)